


The Complex - Bulkhead Door

Assembly Instructions

Assembly starts at step 1 and ends at step 6

Finished Part

Part 1
Door

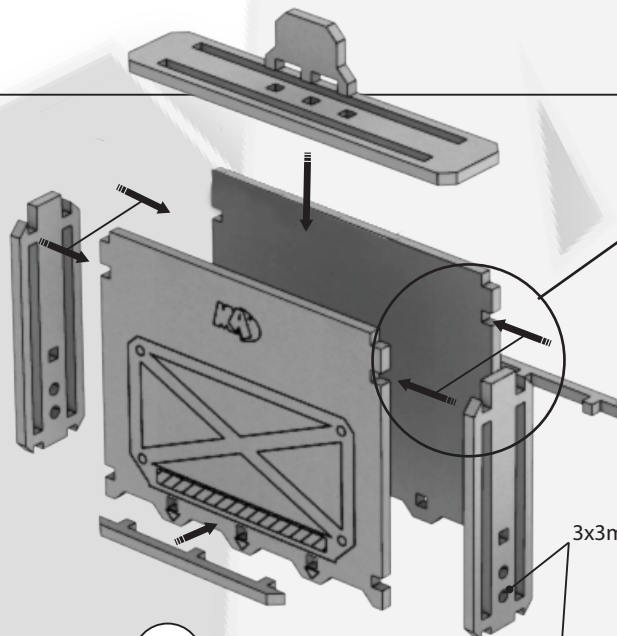


3x3mm Magnet Holes

6

Part 2
Door frame

2

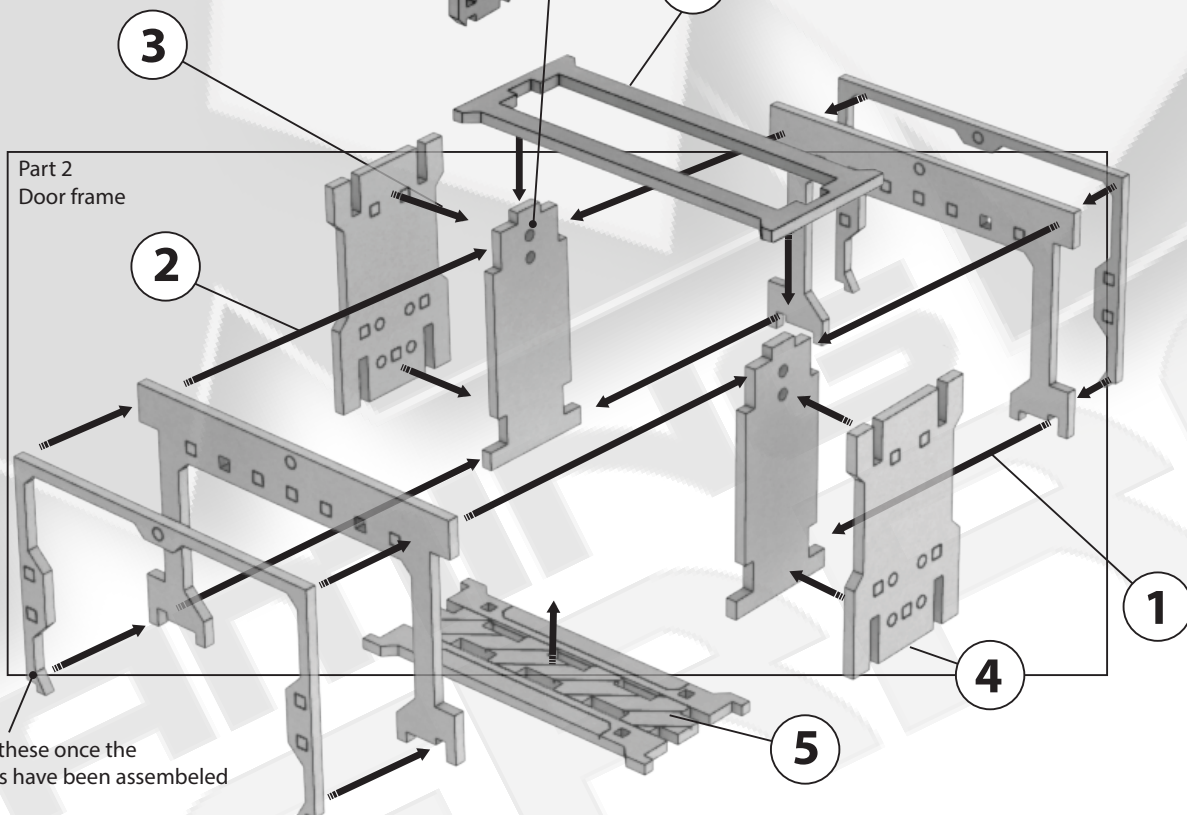

Add these once the
doors have been assembled

Note: Any accessories can be added once the door has been completed

Note: All 3mm round holes are cut for magnets if you wish to use them

Designed & produced by



Careful, this pack may contain fragile parts

